


Sending a program to the 920i over ethernet


1) press config switch

- This is a switch located behind a small cover with 4 screws on the bottom of the scale

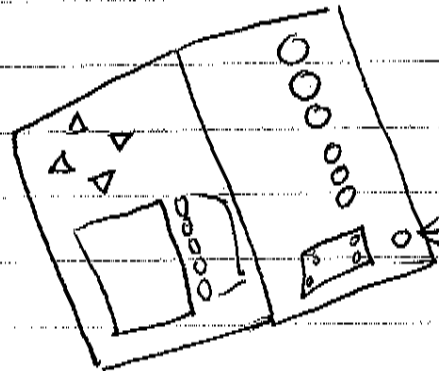

push paperclip or screw into hole to place scale into config mode

2. Navigate menu using the keys

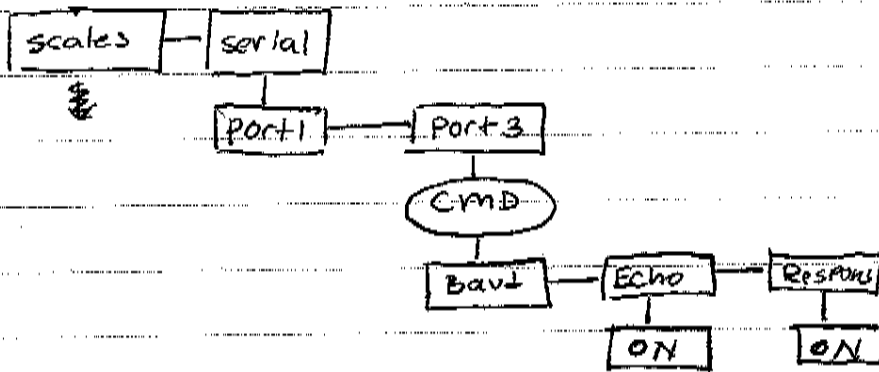

Navigate menu + modify the Echo setting to be "ON" and the response setting to "ON". Once changed press the Δ up arrow all the way back to the top. Then press save + exit.

3. Once screen is back to normal operation, press the config switch once more.

4. Run IRev Software
5. File/open → the xxxx.a20 file.
then click
6. Communications/connect
7. Target IP address = IP address of the Scale
8. Port should be 10001
9. Click
10. Communications / Download Configuration
 - If you get a message stating you will be overwriting the local database say Yes
11. Check off : Standard Configuration
 - Setpoints
 - Widgets
 - Database tables
 - Write program file
12. Select the program to send to the scale by clicking the button. Find the xxx.cod file & click
13. When Complete, press save & exit on the scale indicator
You are ready to go.

Any Questions Please call John Russo 203 792-2854